

# ***RR-CirKits, Inc.***

*Affordable Electronics for Model Railroads*

## ***LocoBuffer-NG Rev-a Quick Start Guide Revision-b***

### **Getting Started**

---

- The LocoBuffer-NG operates at USB speed. No USB port settings are required.
- Plug the LocoBuffer-NG into an unused USB port on your computer. Your computer should detect the new unit and download its drivers automatically from Microsoft or Apple. **Note: your computer must be connected to the internet in order to get this driver update from Microsoft or Apple!**
- Some newer laptop computers without any USB Type A ports will require a USB Type C Male to USB Type A Female adapter cable.
- The right hand yellow status indicator should illuminate as soon as your drivers are installed and they recognize the LocoBuffer-NG.
- Connect the unit's LocoNet<sup>®</sup> jack to any point on your system's LocoNet<sup>®</sup>. The left hand green status indicator should illuminate, and the center red activity indicator should now indicate all LocoNet<sup>®</sup> traffic.
- Set your software's settings to match the new communications port.
- You should now be able to control your Railroad from your software.
- See <http://www.rr-cirkits.com/manuals/LB-manual-Rev-b> for further help.

RR-CirKits, Inc.  
7918 Royal Ct.  
Waxhaw, NC 28173  
USA

<http://www.rr-cirkits.com>  
[sales@rr-cirkits.com](mailto:sales@rr-cirkits.com)  
[service@rr-cirkits.com](mailto:service@rr-cirkits.com)  
1-704-843-3769  
Fax: 1-704-243-4310